

Washing Instructions

- After printing, allow printed garment to sit for a minimum of 24 hours before washing or wearing.
- 2) If the garment is to be worn immediately, wash and dry your garment first.
- 3) Make sure to turn your garment "inside out" before washing to minimize abrasion within the washing machine.
- 4) Use a mild, color-safe detergent in the wash cycle. Allow your detergent to dilute before placing your garment in the washing machine.
- 5) **Do not use** bleach, non-bleach alternatives, or pre-wash treatments in the wash cycle with garments decorated by Reveal-S.
- 6) **Do not use** liquid fabric softener in the wash cycle.
- 7) Wash garment on "Cold" or "Warm" water setting with "Delicate" or "Normal" wash cycle selected. Always wash garments decorated by Reveal-S with other garments in the wash tub don't wash the garment by itself.
- 8) Do not set the wash temperature above 105°F / 40°C.
- 9) Promptly remove garment from wash once cycle is complete and dry garment.
- 10) Tumble dry on "Low Heat" or "Air Dry".
- 11) Fabric Sheets can be used in the Dryer with your garment.
- 12) Do not iron over the imaged area of the garment.
- 13) Do not "Dry Clean" decorated garments.



Wash performance may vary depending on your washing/drying equipment, water hardness and detergents used.

300-826-6332 www.conde.com

